


Multi Channel Surface Readout

ASR240

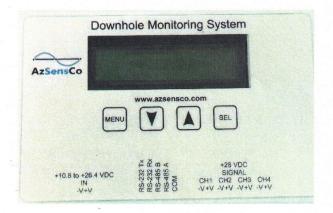

The ASR240 is the surface readout unit for the APS400/APS420 series transducers. It is designed to read the data from up to 4 transducers.

The SRU has a 16-digit LED display with built-in Modbus support. The SRU acts as a RTU slave. There are two Modbus connections available, two wire RS-485 and RS-232. Only one connection can be used at a time.

Both connections are optically isolated to prevent ground-based noise and provide electrical protection.

The menu that is accessible from the front panel has options for one or up to four transducers with up to 2 pressures per transducer plus the optional accelerometer reading in the APS240. There are several Modbus speeds and different data integration options.

Specifications

Power Required	12-24VDC
Display Type	16 Digit Alphanumeric LED
Communication Protocol	Modbus RTU Slave
Modbus RS-485 (Isolated)	3 Wire Standard
Modbus RS-232 (Isolated)	3 Wire, No Handshake Required
Operating Temperature	-18°C to 85°C
Dimensions	5.25" x 4.25" x 1.25"
Weight	1.0 Lbs.

Ordering Guide

ASR240	ASR240
DIN Rail Mount	ASR240-DIN



SRU Menus

Menu: ASR200/240



Overview Menu

On power up, the SRU will enter the overview mode and cycle between the time/ date and the temperature/ pressure readings. If the accelerometer is present, those readings will be displayed.


Press Menu Button 2x For Settings Menu





Press Select Button to step through menu Items. See menu tables below for SRU models. To change a parameter, press the up or down arrow keys. To save the change, press the menu button.

Press Menu Button for Save Menu

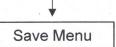

Press Select Button for Save to Flash Menu





Press the DOWN Arrow key to save the changes or the UP Arrow key to discard the changes. The menu will return to the Overview Menu and will cycle through the readings.





Modbus Registers

Temperature 1 Pressure 1 Temperature 2 Pressure 2	0	F										
Temperature 2		DOLL.	_									
	Name and Address of the Owner, where the Owner, which is the Owner, which the Owner, which is	PSIA										1.
Pressure 2	0	F										
	0	PSIA										
Downhole Current	0	×10 mA										
System Voltage		×10 V										
Total Packets												
Bad Packets												
Sensor Channels	0		2	4								
	0	s	1	2	3	4	5	6	7	8	9	10
		BAUD		1	2	3						
THE RESIDENCE OF THE PARTY OF T			1	2								
	0	PSIA			2	3	4					_
THE RESERVE THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER.												
												_
NAME AND ADDRESS OF THE OWNER, WHEN PERSON ADDRESS OF THE OWNER, WHEN PERSON AND ADDRESS OF THE OWNER, WHEN PERSON ADDRESS OF THE OWNER, WHEN PERS												
				 								_
												_
AND DESCRIPTION OF THE PARTY OF												_
				_								
												_
	_											_
				-								_
	0											_
												_
		_									-	-
							-					-
		_		-								-
												-
	- 0											\vdash
Name and Address of the Owner, where the Park of the Owner, where the Owner, while the Owner, where the Owner, while the Owne												-
		G										-
												_
												-
		u										-
NAME OF TAXABLE PARTY OF TAXABLE PARTY.	U											-
												-
		5		-	-							
		1										-
		PSIA										
		F										-
THE RESIDENCE OF THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER, THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER, THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER, THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER, THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER, THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER, THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER, THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER, THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER, THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER, THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER, THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER, THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER, THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER, THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER, THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER, THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER, THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER, THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER, THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER, THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER, THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER, THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER, THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER, THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER, THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER, THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER, THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER, THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER, THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER, THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER, THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER, THE PERSON NAMED IN COLUMN TWO IS NAMED IN THE OWNER.	THE RESERVE OF THE PERSON NAMED IN COLUMN 2 IS NOT THE PERSON NAME	-										-
		x10 mA										
NAME OF TAXABLE PARTY OF TAXABLE PARTY OF TAXABLE PARTY.	CONTRACTOR DESCRIPTION OF THE PARTY OF THE P		THE RESERVE OF THE PERSON									
	_	S		ASSESSMENT OF THE OWNER, THE OWNE	and the same of th	-	-	6	7	8	9	10
		Bad Packets 0 Sensor Channels 0 Integration Time 0 Mindbus Baudrate 0 Mindbus Baudrate 0 Modbus ID 0 Com Type 0 Pressure Range 0 Clock Wonth 0 Clock Month 0 SW Jay Revision 0 DH HW Millor Revision 0 DH HW Major Revision 0 DH HW Millor Revision 0 DH SW Major Revision 0 DH Error Code 0 Password 0 Accel X 0 Accel X 0 Accel X 0 <td> Bad Packets Sensor Channels O</td> <td> Bad Packets Sensor Channels O</td> <td> Bad Packets </td> <td> Bad Packets </td> <td> Bad Packets </td> <td> Bad Packets</td> <td> Bad Packets</td> <td> Bad Packes</td> <td> Bad Packets </td> <td> Bad Packets</td>	Bad Packets Sensor Channels O	Bad Packets Sensor Channels O	Bad Packets	Bad Packets	Bad Packets	Bad Packets	Bad Packets	Bad Packes	Bad Packets	Bad Packets





Modbus Registers

48	DH Serial Number	1 1						1					
49	DH HW Major Revision	1											
50	DH HW Minor Revision	1											
51	DH SW Major Revision	1											
52	DH SW Minor Revision	1											
53	DH Error Code	1		1								-	
54	AcœFX	1	G										
55	AcœFY	1	G										
56	AcœFZ	1	G										
57	DH Gen	1											
58	Temperature 1	2	F										
59	Pressure 1	2	PSIA										
60	Temperature 2	2	F										
61	Pressure 2	2	PSIA										
62	Downhole Current	2	x10 mA										
63	Sensor Channels	2		2	4								
64	Integration Time	2	S	1	2	3	4	5	6	7	8	9	10
65	Pressure Range	2	PSIA	0	1	2	3	4					
66	DH Serial Number	2											
67	DH HW Major Revision	2											
68	DH HW Minor Revision	2											
69	DH SW Major Revision	2											
70	DH SW Minar Revision	2											
71	DH Error Code	2											
72	AccelX	2	G										
73	AcœFY	2	G										
74	Accel-Z	2	G										
75	DH Gen	2											
76	Temperature 1	3	F									e de la companya	
77	Pressure 1	3	PSIA										
78	Temperature 2	3	F										
79	Pressure 2	3	PSIA									(
80	Downhole Cufrent	3	x10 mA										
81	Sensor Channels	3		2	4								
82	Integration Time	3	5	1	2	3	4	5	6	7	8	9	10
83	Pressure Range	3	PSIA	0	1	2	3	4					
84	DH Serial Number	. 3											
85	DH HW Major Revision	3											
86	DH HW Minor Revision	3											
87	DH SW Major Revision	3										-15	es :
88	DH SW Minor Revision	3											3"
89	DH Error Code	3											
90	Acœl-X	3	G										
91	Acœl-Y	3	G										
92	Acœl-Z	3	G		-								
93	DH Gen ·	2											





Error Codes

Hex Code	Decimal Code Error Name	Error Description	Threshold	Units
0x00	0 No Error	No error is present, system is operating normally		
0x01	1 High Temp 1	Temperature is higher than the maximum		С
0x02	2 Low Temp 1	Temperature is lower than the minimum		C
0x03	3 High Pressure 1	Pressure is higher than the maximum		PSIA
0x04	4 Low Pressure 1	Pressure is lower than the minimum		PSIA
0x06	6 Downhole Short 1	Downhole current is higher than the maximum		30mA
0x07	7 High Voltage	Input voltage is higher than the maximum	26	V
0x08	8 Low Voltage	Input voltage is lower than the minimum	21.6	V
0x09 ·	9 RTC Failure	RTC failed to initialize, or operate correctly		
0x0A	10 FLASH Erase Failure	System has failed to erase flash		
0x0B	11 FLASH Write Failure	System has failed to write to flash		
0x0C	12 Not Implemented			
0x0D	13 Not Implemented			
Ox0E	14 Not implemented			
Ox0F	15 Not Implemented			
0x10	16 MODBUS: Address	Wrong modbus address		
0x11	17 MODBUS: Read Memory Address	Invalid modbus memory read address		
0x12	18 MODBUS: Read Register Quantity	Invalid modbus register read quantity		
0x13	19 MODBUS: Write Memory Address	Invalid modbus memory write address		
0x14	20 MODBUS: Write Register Quantity	Invalid modbus register write quantity		
0x15	21 MODBUS: CRC Read Error	Invalid modbus CRC read calculation		
0x16	22 MODBUS: CRC Write Error	Invalid modbus CRC write calculation		
0x17	23 MODBUS: Function Code	Invalid modbus function code		
0x18	24 ADC Failure	ADC Failed to function		
0x19	25 SD Failure	SD card had an unrecoverable failure		
0x1A	26 High Temp 2	Temperature is higher than the maximum		C
0x1B	27 Low Temp 2	Temperature is lower than the minimum		C
0x1C	28 High Pressure 2	Pressure is higher than the maximum		PSIA
0x1D	29 Low Pressure 2	Pressure is lower than the minimum		PSIA
0x1E	30 Downhole Short 2	Downhole current is higher than the maximum		30mA
0x1F	. 31 High Temp 3	Temperature is higher than the maximum		C
0x20	32 Low Temp 3	Temperature is lower than the minimum		C
0x21	33 High Pressure 3	Pressure is higher than the maximum		PSIA
0x22	34 Low Pressure 3	Pressure is lower than the minimum		PSIA
0x23	35 Downhole Short 3	Downhole current is higher than the maximum		30mA
0x24	36 High Temp 4	Temperature is higher than the maximum		С
0x25	37 Low Temp 4	Temperature is lower than the minimum		С
0x26	38 High Pressure 4	Pressure is higher than the maximum		PSIA
0x27	39 Low Pressure 4	Pressure is lower than the minimum		PSIA
0×28	40 Downhole Short 4	Downhole current is higher than the maximum		30mA